




# FOILBOARD® INSULATION SYSTEMS INSTALLATION GUIDE

To achieve maximum thermal performance and to ensure a fast and simple installation of Foilboard® GREEN rigid insulation panel to a shed/garage wall and/or roof, Foilboard Australia recommends the following method.

## What do you need?

-  Use Foilboard® Ultra Fasteners for GREEN 20 and GREEN 25 (Use Timber or Steel fasteners depending on application)
-  Foilboard® Silver Joining tape
-  Foilboard® Spacer Blocks (Optional)




SHED / GARAGE

## How to Install?



Foilboard GREEN rigid insulation panel should be installed between the wall girts and to the underside of the roof battens/purlins

STEP 1

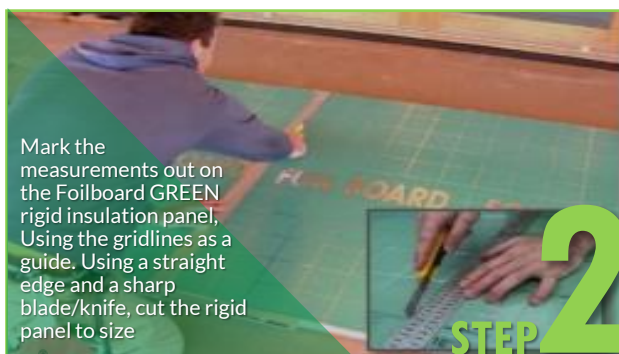

Mark the measurements out on the Foilboard GREEN rigid insulation panel, Using the gridlines as a guide. Using a straight edge and a sharp blade/knife, cut the rigid panel to size

STEP 2



Use spacer blocks to maintain an airspace between the Foilboard and the metal sheeting to increase insulation performance.

STEP 3







Fasten the insulation panel to the roof battens/purlins with Foilboard fasteners using approx. 5-6 per m2, use either a hammer or drill as required.

STEP 4



Tape all penetrations, joints and gaps using Foilboard GREEN tape, to minimise hot/cold air transfer.

STEP 5

-  Foilboard® Panels don't need to join on a batten or purlin. Butt join and tape to ensure continuous insulation.
-  Install Foilboard® silver side as the finish to brighten your shed or garage space.
-  Place the fastener 50mm in from the edge of the insulation panel to leave room for the tape.
-  Off cuts can be used as a spacer block to help minimise wastage

TOP TIPS



*It's the smarter way to insulate*

INFORMATION HOTLINE: 1800 354 717  
www.foilboard.com.au