

FOILBOARD® INSTALLATION GUIDE

INSULATION SYSTEMS


To achieve maximum thermal performance and to ensure the fast and simple installation of Foilboard® GREEN rigid insulation panel to underfloor systems, Foilboard Australia recommends the following method.

What do you need?



Use Foilboard® Standard Fasteners for GREEN 10 and GREEN 15 OR Foilboard® Ultra Fasteners for GREEN 20 and GREEN 25 (Use Timber or Steel fasteners depending on application)

Foilboard® Green OR Silver joining tape

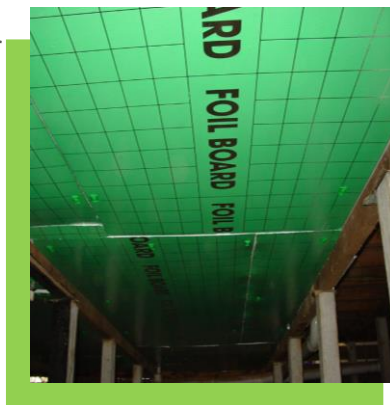

How to Install?



Install the Foilboard GREEN panel against the bearer (Below joists)




Fix the panel using 3 Foilboard Fasteners per joist in between bearers.



Use full sheets of Foilboard GREEN panel in the areas that they fit. Then measuring and cutting the smaller areas



Join sheets together and continue along underfloor cutting around any services as required

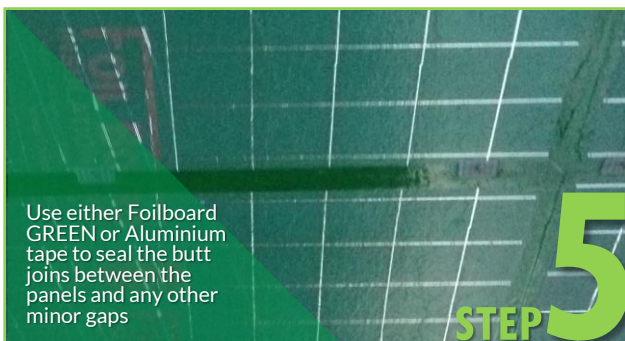

Use either Foilboard GREEN or Aluminium tape to seal the butt joints between the panels and any other minor gaps

- ✓ Install Foilboard® after the framing and plumbing have been completed prior to electrical services
- ✓ You can use Foilboard Green or Silver joining tape or a neutral cure silicon to seal any minor gaps
- ✓ The Foilboard® GREEN antiglare is there to protect you. Both the antiglare and silver foil reflect heat.

TOP TIPS



UNDERFLOOR (RETROFIT)



It's the smarter way to insulate

INFORMATION HOTLINE: 1800 354 717
www.foilboard.com.au